 




# TASER Axon Body 2 Quick Start Guide

 
English

## Hardware

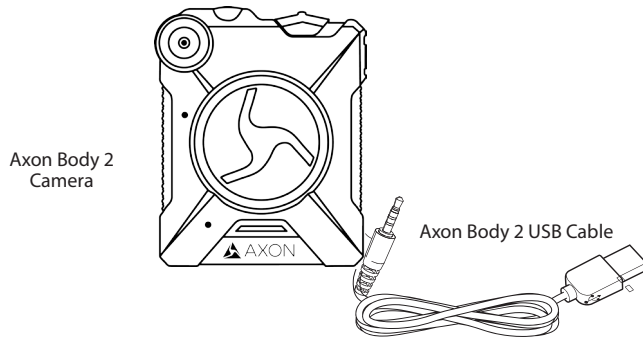

Axon Body 2 Wall Charger (not shown)

## Quick Reference

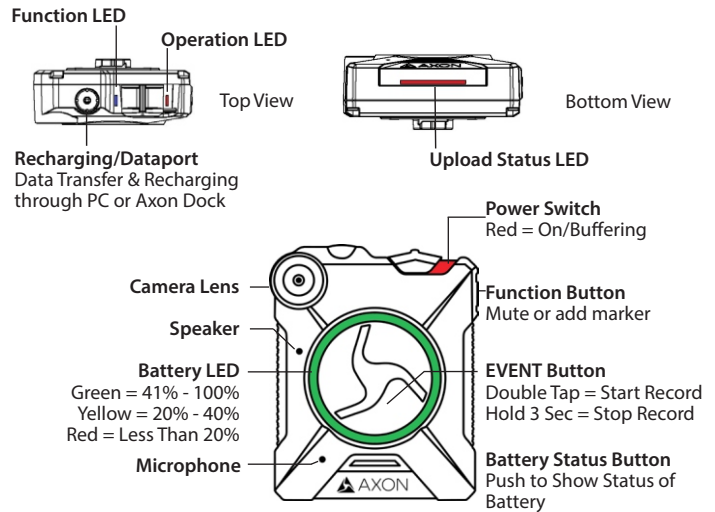


**Read, understand, and follow all current instructions, warnings, and relevant TASER training materials before using any Axon system. The most up-to-date warnings and instructions are available at [www.taser.com](http://www.taser.com).**

## Recording


The Axon Body 2 camera has two operating modes. The default mode, or BUFFERING mode, provides pre-event buffering to capture activities that occur before you activate the EVENT (recording) mode.

 - 1 Turn the system on. Move the ON/OFF switch to the ON position.

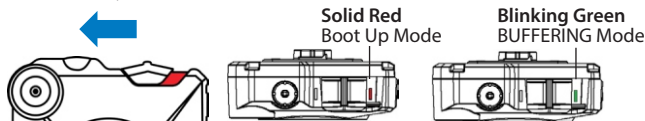

- The camera takes a few seconds to boot up and be ready to record (the red area under the switch will be exposed with the switch moved to the ON position).
- The operation LED will be solid red and then transition to blinking green when the system goes into BUFFERING mode.
- The Axon Body 2 camera will go into BUFFERING mode after the boot up sequence. The BUFFERING mode holds the previous 30 seconds of video [NO AUDIO] leading up to the beginning of a recording.

 - 2 To record, quickly double-press the EVENT button.
  - The camera now records audio as well as video.
  - The camera will beep twice to let you know that recording has started. The two beeps will repeat every two minutes (audio notifications can be deactivated if necessary).
  - The operation LED will blink red.

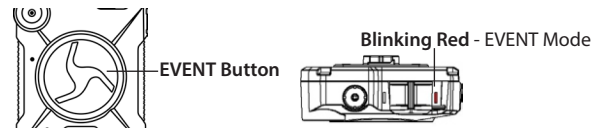

- 3 To add a marker to the video, quickly press and release the Function button.
- 4 To stop audio recording (mute), press and hold the Function button for three seconds.
- 5 To stop all recording and return to BUFFERING mode, press and hold the EVENT button for at least three seconds until there is a long, audible beep.

**With default settings, the system does not capture audio in BUFFERING mode, so anything recorded in that mode will be video-only. BUFFERING mode starts only after the camera is turned on. The system does not record when the Axon Body 2 camera is turned off.**

## Camera Operation LED

The Axon Body 2 camera's operation LED displays the system's current operating mode.

Operating Mode	Operation LED
Recording Recovering interrupted video	Blinking red
Buffering	Blinking green
Booting up/powering down Error state	Solid red

**When the Function LED also is blinking red.**

**When the Function LED also is solid red.**

## Camera Function LED

The Axon Body 2 camera's function LED displays when certain functions are enabled.

Function Enabled	Function LED
Mute	Blinking blue
Camera error	Solid red
Bluetooth feature is booting up	Solid blue

Use the power switch to turn the camera off and on.

## Battery LED

The camera's battery LED displays the battery's remaining capacity, when the device is being used or when charging.

Battery Status	Battery LED
Battery capacity is 41-100%	Green
Battery capacity is 20-40%	Yellow
Battery capacity is less than 20%	Red during operation; flashing red and yellow during charging
Battery critically low	Blinking red and yellow

## Notification

 
The camera emits beeping sounds called audio prompts to notify you of the system status. These audio prompts usually occur after you perform an action with the camera. For some actions, the camera also vibrates while making an audio prompt.

Operating Mode	Audio	Vibration
Powering on or off	One beep	Once
Recording an event	Two beeps (every two minutes)	Twice (every two minutes)
Press the battery button while the camera is recording	Two beeps	Twice
The device is ending an event and returning to BUFFERING mode	One long beep	Once, long duration
The battery is at 20% capacity or lower	Four quick beeps (every five minutes)	Four times, quickly, every five minutes
Camera memory is full (camera will not record).	Three beeps	Three times

## Recharging the Battery and Uploading Data

If you do not have an Axon Dock, upload video with a Windows compatible computer using Evidence Sync: [TASER.com/syncdownload](https://TASER.com/syncdownload).

- 1 Ensure the Axon Body 2 camera is off. Insert the camera into the Axon Dock as shown. The dock automatically uploads data to Evidence.com services, deletes videos from the camera, and charges the camera. (The camera must be registered to your Evidence.com account.)
- 2 At the beginning of the next shift, ensure that your camera (if one has been assigned to you) displays with a green upload status LED before removing it from the dock.

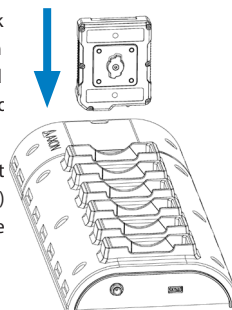

## Axon Dock Upload Status LED

When you plug your camera into the Axon Dock, the upload status LED on the bottom of the camera displays the system's status

 
System Status	LED Indication
Initial connection (momentary)	Solid red (for 20 seconds or fewer)
In queue awaiting upload	Solid yellow
Device ready (all videos uploaded successfully) and fully charged	Solid green
Device not assigned, agency mismatch, camera set in the offline mode, or device error	Blinking red
Uploading data	Blinking yellow – <b>DO NOT remove the camera from the Axon Dock</b>
Firmware update, internal battery charging, extremely low battery, or memory full	Blinking red and yellow – <b>DO NOT remove the camera from the Axon Dock</b>
Transfer error, device re-trying to transfer	Blinking green and yellow
Network error	Blinking red, yellow, and then green (cycling all colors)
Axon Dock has no communication with the camera	LED off

## Using Axon View

The Axon View application enables you to replay video and add metadata (GPS, title, case ID, and category) to your videos using a smart phone or multimedia player.

- 1 Using your smart device, download the Axon View application from the Google Play store or the iTunes App Store. Search Axon View.
- 2 On your smart device, open the Axon View application and follow the onscreen instructions.

**Note:** All data is stored on the Axon camera. No videos are stored on your smart device.


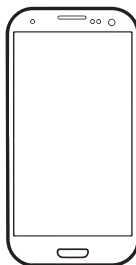


## Pairing the Axon Body 2 Camera with a Smart Device

- 1 Turn on the Axon Body 2 camera.
- 2 Wait until the Function LED is not lit anymore.
- 2 Hold down the Function and EVENT buttons for five seconds.
- 3 Wait until you hear four beeps. The Function LED will blink green.
- 4 On your smart device, follow the onscreen instructions.



  1. Turn on the Axon Body 2 camera.
2. Hold down the Function and EVENT buttons for five seconds.

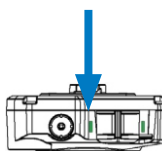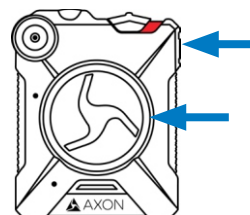

3. The Function LED will blink green; you will hear four beeps.


Bluetooth is a trademark of the Bluetooth SIG, Inc. Google Play is a trademark of Google, Inc. iTunes is a trademark of Apple, Inc. IOS is a trademark of Cisco Systems, Inc. Windows is a trademark of Microsoft Corporation.

AXON, Axon, Axon Body 2, Axon Dock, Axon View, Evidence.com, Evidence Sync, TASER, and © are trademarks of TASER International, Inc., some of which are registered in the US and other countries. For more information, visit [www.taser.com/legal](https://www.taser.com/legal). © 2016 TASER International, Inc.

MPC0205 Rev: B


## Pairing the Axon Body 2 Camera with a Smart Device

 - 1 Turn on the Axon Body 2 camera. Wait until the Function LED is not lit anymore.
- 2 Hold down the Function and EVENT buttons for five seconds.
- 3 Wait until you hear four beeps. The Function LED will blink green.
- 4 On your smart device, follow the onscreen instructions.

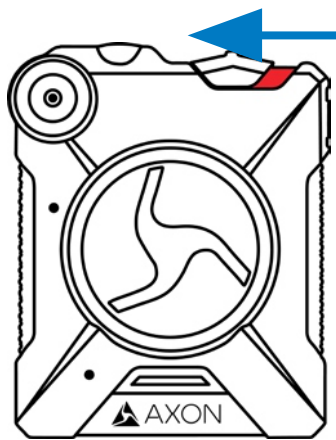

1. Turn on the Axon Body 2 camera.

 
2. Hold down the Function and EVENT buttons for five seconds.

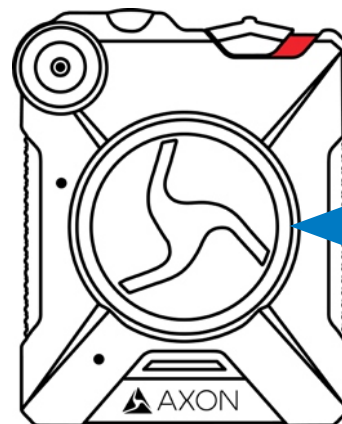

Function

Event

 Function LED

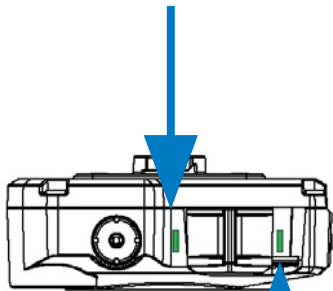


Operation LED


3. The Function LED will blink green; you will hear four beeps.

## Quick Reference

 Axon Body 2  
Camera

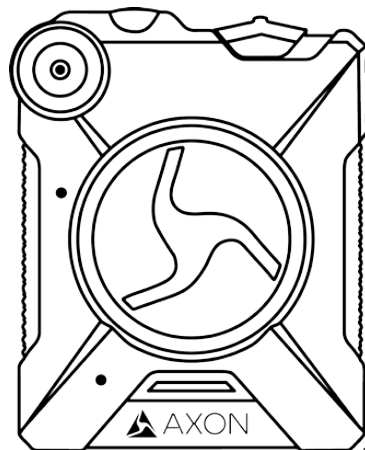


Axon Body 2 USB Cable

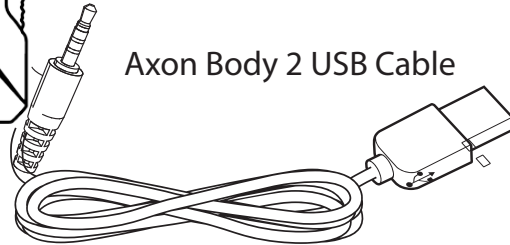 


Function LED

 Operation LED

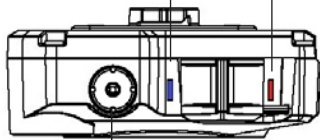

Top View

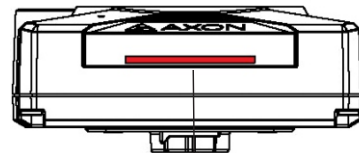 


Bottom View

Recharging/Dataport  
Data Transfer & Recharging

Upload Status LED

 through PC or Axon Dock

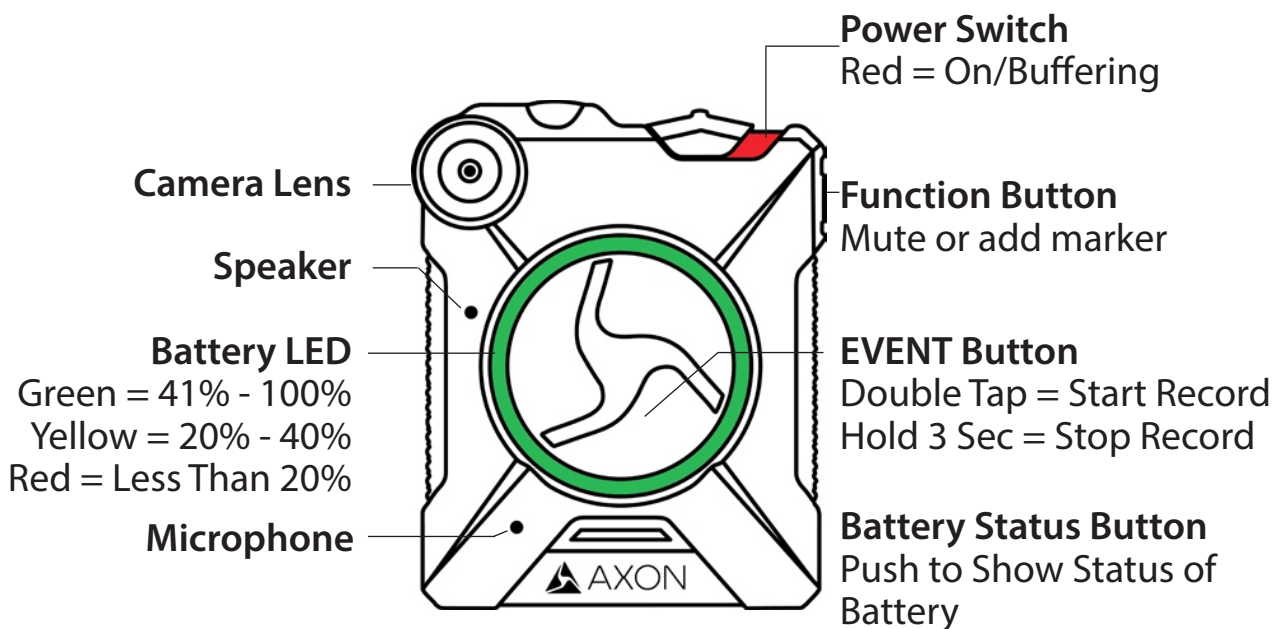

## Camera Operation LED

The Axon Body 2 camera's operation LED displays the system's current operating mode.

Operating Mode	Operation LED
Recording Recovering interrupted video	Blinking red
Buffering	Blinking green
Booting up/powering down Error state	Solid red

## Camera Function LED

The Axon Body 2 camera's function LED displays when certain functions are enabled.

Function Enabled	Function LED
Mute	Blinking blue
Camera error *	Solid red
Bluetooth feature is booting up	Solid blue

\* Use the power switch to turn the camera of and on.

## Battery LED

The camera's battery LED displays the battery's remaining capacity, when the device is being used or when charging.

Battery Status	Battery LED
Battery capacity is 41–100%	Green
Battery capacity is 20–40%	Yellow
Battery capacity is less than 20%	Red during operation; lashing red and yellow during charging
Battery critically low	Blinking red and yellow

## Notification

The camera emits beeping sounds called audio prompts to notify you of the system status. These audio prompts usually occur after you perform an action with the camera. For some actions, the camera also vibrates while making an audio prompt.

Operating Mode	Audio	Vibration
Powering on or off	One beep	Once
Recording an event	Two beeps (every two minutes)	Twice (every two minutes)
Press the battery button while the camera is recording	Two beeps	Twice
The device is ending an event and returning to BUFFERING mode	One long beep	Once, long duration
The battery is at 20% capacity or lower	Four quick beeps (every five minutes)	Four times, quickly, every five minutes
Camera memory is full (camera will not record).	Three beeps	Three times